


BEARING PAD INSTALLATION PROCEDURE

1. Prepare the foundation and sub-base per specifications provided by ConVault.
2. Mark the foundation where the neoprene pads will be located in accordance with drawing for the appropriate size tank.
3. Lay one (1) 1" thick x 12" long pad under each indentation on the ends of each of the 8" wide leg as shown in the drawing. The width of the pads shall be the same as the width of the tank leg (8").
4. Lay one (1) 1" thick x 12" long pad under the center indentation of the opposite leg (8" or 16" wide) as shown in the drawing. The width of the pad shall be the same as the width of the tank leg.
5. Using appropriate lifting equipment, lift the tank and hold it about one foot above the foundation. This step of the procedure requires extreme caution, while the tank is being lowered over the pads, make sure that no person is standing under or near the tank.
6. Lower the tank and set it on the pads. When the tank is being lowered, adjust the pad's location, if necessary, to set them directly under the tank legs.
7. The pads must be snug and completely touching the legs. If one or more pads are not snug and completely touching the bottom of the legs, lift the tank and use an additional 1/8" or 1/4" thick Neoprene pad or grout, as necessary, to make the pads touch the legs.

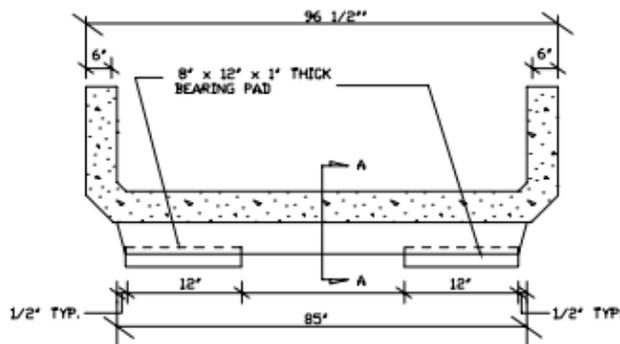

2000 gallon tank example

